

VOL.

4

ENHANCING YOUR IQ

WITH
Salima Jaffer

APPLIQUÉ AND BEYOND

TISSUE HOLDER



baby lock

FOR THE LOVE OF SEWING

Creating the Tissue Holder:

1. Click on IQ Designer



2. Click on the Shapes Icon



3. Select the Square Shape  (Row 1 Column 1)

4. Click OK

5. Click on Size

6. Change the H = 5.83"



and the W = 3.90"



7. Click OK

8. Click on the Line Region Property Icon



9. Change Color to Red

10. Select the Double Run Icon



11. Click OK

12. Click on the Bucket/Cup Icon



13. Touch the Rectangle Box

14. Click Memory then Click on the Machines Memory

15. (for the Destiny Click on the Pocket with the Red Arrow Machines Memory)




then click on Machine

16. Click Next

17. Click Set and Click OK when the message pop up

(For Destiny, Click on Preview, OK, Set, OK)

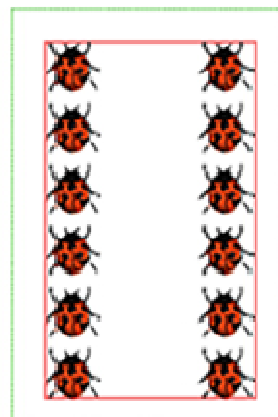

18. Click Add

19. Click on the Pocket with the Arrow



(For Destiny Click on the Pocket with the Blue Arrow)



20. Select the design you just created

21. Click OK

22. Click on the Line Region Property Icon

23. Change Color to Green

24. Select the Double Run Icon

25. Click OK

26. Click on the Bucket/Cup Icon

27. Touch the Rectangle Box

28. Click Next

29. Click Set and Click OK when the message pop up

(For Destiny, Click on Preview, OK, Set, OK)

30. Click on Add

31. Select Folder Number 2

32. Select Design 18

33. Click Set

34. Click Edit



35. Click on the Continuous Embroidery Icon

36. Click on Icon to add more embroideries vertically



37. Click on the vertical with the plus until you have 6 ladybugs



38. Click on the Icon once to add more ladybugs horizontally




39. Click to add one more Column



40. Click on the Icon to add spacing in between the two rows



41. Click

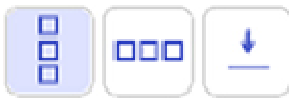

42. Click on



to spread the flowers vertically

43. Click OK

44. Click Add

45. Click on IQ Designer

46. Click on the Pocket with the Arrow Icon

(For Destiny – Click on the Pocket with the Blue



Arrow)

47. Select the design you created (the red rectangle box)


48. Click OK

49. Click on the Line Region Property Icon

50. Change Color to Blue

51. Select the Double Run Option

52. Click on the Bucket/Cup Icon

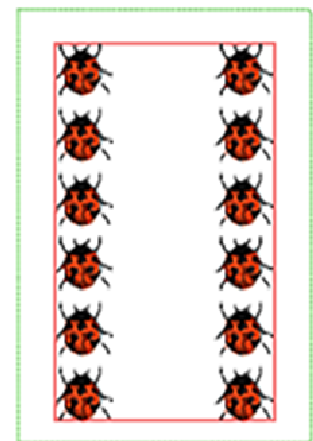

53. Touch the Rectangle Box

54. Click Next

55. Click on Set and Click OK when the message pop up

(For Destiny, Click on Preview, OK, Set, OK)

56. Click Edit

57. Click on the Size Icon and reduce the size proportionally by 2 clicks

58. Click OK

59. Click Memory then Click on the Machines Memory

*(for the Destiny Click on the Pocket with the Red Arrow
Machines Memory)*



then click on Machine

60. Click on Embroidery

Embroidering the Tissue Holder:

1. Hoop a piece of Tear Away Stabilizer in a 5" x 7" Hoop
2. Thread the Machine with Embroidery Thread that matches the fabric
3. Stitch Color 1 (Placement Line)
4. Lay both folded pieces of fabric with the folded side facing the center of the hoop – overlap the pieces by approx. $\frac{3}{4}$ " Tape in place on the outer and on the fold
5. Stitch Color 2 (Tackdown Line)
6. Stitch Color 3 – 5 which are the flowers
7. Lay the back piece Right Side Down on top of the embroidery. Tape in place
8. Stitch Color 6 (The Final Construction Stitch)
9. Remove the Hoop from Machine and Trim – leaving approx. $\frac{1}{4}$ " all the way around. Clip the corners.

Fabric Requirements:

1. Two 7" x 7" pieces. Fold them Wrong Side Together
2. One 7" x 7" piece for the Back
3. 5" x 7" Hoop
4. Tear Away Stabilizer
5. Paper Tape
6. One Package of travel size Kleenex